

# Contents

<b>1 Instructions</b>	<b>4</b>
1.1 General safety instructions	4
1.2 Appliance purpose	7
1.3 Manufacturer's liability	7
1.4 Disposal	7
1.5 Identification plate	8
1.6 This user manual	8
1.7 How to read the user manual	8
<b>2 Description</b>	<b>9</b>
2.1 Cooking zones	9
2.2 Symbols	10
2.3 General Description	10
<b>3 Use</b>	<b>11</b>
3.1 Preliminary operations	12
3.2 Using the cooking hob	12
<b>4 Cleaning and maintenance</b>	<b>21</b>
4.1 Cleaning the surfaces	21
4.2 Ordinary weekly cleaning	21
4.3 Food stains or residues	21
4.4 What to do if...	22
<b>5 Installation</b>	<b>23</b>
5.1 Safety instructions	23
5.2 Section cut from the countertop	23
5.3 Mounting	26
5.4 Electrical connection	27
5.5 Instructions for the installer	30

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: [www.smeg.com](http://www.smeg.com)



# Instructions

## 1 Instructions

### 1.1 General safety instructions

#### Risk of personal injury

- During use the appliance and its accessible parts become very hot. Never touch the heating elements during use.
- Protect your hands by wearing heat-proof gloves during use.
- Never try to put out a fire or flames with water: Turn off the appliance and smother the flames with a fire blanket or other appropriate cover.
- This appliance may be used by children aged at least 8 and by people of reduced physical, sensory or mental capacity, or lacking in experience in the use of electrical appliances, provided that they are supervised or instructed by adults who are responsible for their safety.
- Children must not play with the appliance.
- Keep children under the age of eight at a safe distance unless they are constantly supervised.
- Keep children under the age of 8 away from the appliance when it is in use.
- Cleaning and maintenance must not be carried out by unsupervised children.
- Be aware of how rapidly the cooking zones heat up. Do not let pans heat up when dry, as there is a danger of them overheating.
- Fats and oils can catch fire if they overheat. Do not leave the appliance unattended while preparing foods containing oils or fats. If fats or oils catch fire, never put water on them. Place the lid on the pan and turn off the relevant cooking zone.
- The cooking process must always be monitored. A short cooking process must be continuously monitored.
- Do not place metal objects, such as dishes or cutlery, on the hob surface during use as they may overheat.
- Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance.
- Do not pour water directly onto very hot trays.
- **DO NOT USE OR STORE FLAMMABLE MATERIALS NEAR THE APPLIANCE OR DIRECTLY UNDERNEATH THE HOB.**



- DO NOT USE AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IT IS IN USE.
- Switch off the appliance immediately after use.
- DO NOT MODIFY THIS APPLIANCE.
- Always use any necessary/required personal protective equipment (PPE) before performing any work on the appliance (installation, maintenance, positioning or movement).
- Before performing any work on the appliance, switch off the power supply.
- Have qualified personnel carry out installation and assistance interventions according to the standards in force.
- Do not try to repair the appliance yourself or without the intervention of a qualified technician.
- If the power supply cable is damaged, contact technical support immediately and they will replace it.

## **Risk of damaging the appliance**

- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges) on glass parts.
- Use wooden or plastic utensils.
- Do not seat on the appliance.
- Do not use the hob as a support surface.
- Do not obstruct ventilation openings and heat dispersal slots.
- Do not use steam jets to clean the appliance.
- Never leave the appliance unattended during cooking operations where fats or oils could be released, as these could then heat up and catch fire. Be very careful.
- Fire hazard: Never leave objects on the cooking surfaces.
- DO NOT USE THE APPLIANCE TO HEAT ROOMS FOR ANY REASON.
- Cooking vessels or griddle plates should be placed inside the perimeter of the hob.
- All pans must have smooth, flat bottoms.
- If any liquid does boil over or spill, remove the excess from the hob.



## Instructions

- Take care not to spill acid substances such as lemon juice or vinegar on the hob.
- Do not spill sugar or sweet mixtures on the hob during cooking.
- Do not place materials or substances that could melt (plastic or aluminium foil).
- Do not put empty pans or frying pans on switched on cooking zones.
- Do not use rough or abrasive materials or sharp metal scrapers.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel- or chromium-plating).
- To avoid potential overheating, the appliance must not be installed behind a decorative door or a panel.
- Have the electrical connection performed by authorised technical personnel.
- The appliance must be connected to earth in compliance with electrical system safety standards.
- Use cables withstanding a temperature of at least 90°C.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.
- The power cable must only be installed or replaced by a qualified technician.

### For this appliance

- If cracks or fissures form, or if the glass ceramic cooking surface breaks, turn off the appliance immediately. Disconnect the power supply and call Technical Support.
- Avoid hard, solid objects falling on the cooking surface.
- Do not use the hob if the pyrolytic cycle is taking place inside any oven installed below.
- Do not touch or clean the hob surface during operation or when the residual heat indicator lights are still on.

### Installation

- THIS APPLIANCE **MUST NOT BE INSTALLED** IN A BOATS OR CARAVANS.
- Position the appliance into the cabinet cut-out with the help of a second person.
- Check that the carcass material is heat resistant.
- Check that the carcass has the required openings.



- Activate the controls lock when you have children or pets which could reach the hob.
- After use the cooking zones remain hot for a certain period of time after they have been turned off. Do not touch the hob surfaces.
- Keep sensor keys clean at all times and do not rest any object on them.

## 1.2 Appliance purpose

- This appliance is intended for cooking food in the home environment. Every other use is considered improper.
- The appliance is not designed to operate with external timers or with remote-control systems.

## 1.3 Manufacturer's liability

The manufacturer declines all liability for damage to persons or property caused by:

- Use of the appliance other than that specified;
- Failure to comply with the instructions in the user manual;
- Tampering with any part of the appliance;
- The use of non-original spare parts.

## 1.4 Disposal



This appliance must be disposed of separately from other waste (Directives 2002/95/EC, 2002/96/EC, 2003/108/EC). The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

To dispose of the appliance:



**Power voltage**

**Danger of electrocution**

- Disconnect the mains power supply.
- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.



# Instructions

Our appliances are packaged in non-polluting and recyclable materials.

- Deliver the packing materials to the appropriate recycling centre.



## Plastic packaging Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the plastic bags.

## 1.5 Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

## 1.6 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

Read this user manual carefully before using the appliance.

## 1.7 How to read the user manual

This user manual uses the following reading conventions:

### Instructions



General information on this user manual, on safety and final disposal.

### Description



Description of the appliance and its accessories.

### Use



Information on the use of the appliance and its accessories, cooking advice.

### Cleaning and maintenance



Information for proper cleaning and maintenance of the appliance.

### Installation



Information for the qualified technician: Installation, operation and inspection.



Safety instructions



Information



Advice

1. Sequence of instructions for use.


- Standalone instruction.



## 2 Description


### 2.1 Cooking zones

Model with straight edge

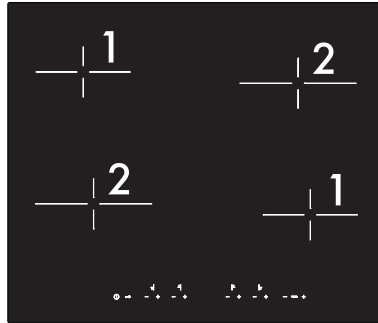


60 cm

Model with bevelled edge

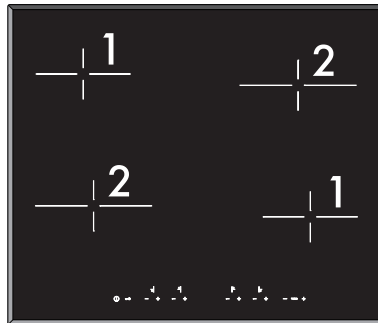

60 cm

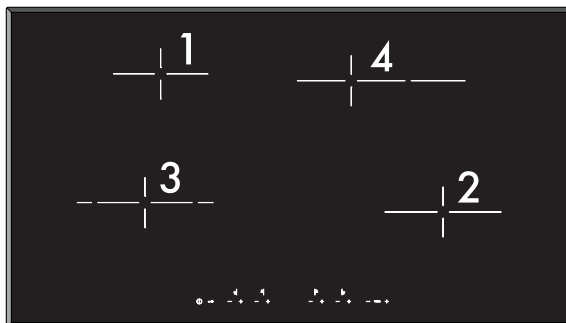

90 cm



## Description

Zone	Outer diameter (mm)	Max. power draw (W)*	Inner diameter (mm)	Max. power draw (W)*
1	148	1200	-	-
2	184	1800	-	-
3	214	2200	148	1000
4	OVAL PLATE	2200	170	1000

\* power levels are approximate and may vary according to the settings made and the mains voltage.

## 2.2 Symbols

**ON/OFF key**

Turns the hob on or off.

**Controls lock key**

Activates or deactivates the controls lock if pressed for 3 seconds.

**Increase key**

Increases the power level or cooking time.

**Decrease key**

Reduces the power level or cooking time.

**Timer key** **TIMER**

Activates the minute minder or the automatic shut-down timer.

## Cooking zones

Front left

Rear left

Rear right

Front right

## 2.3 General Description

The appliance features cooking zones with various diameters and power levels depending on the model. The position and the heat of the cooking zones are limited to within the diameters of the circles traced on the glass.

The cooking zones are of the **HIGH-LIGHT** type, they turn on after a few seconds and the heating is adjustable using the controls on the front panel.

The cooking zones with two or three concentric circles allow double or triple heating: cooking is possible either within the small circle or on both circles.






### 3 Use



#### High temperature Danger of burns

- Protect your hands by wearing heat-proof gloves during use.
- Do not touch or clean the surface of the hob while it is in use or when  appears on one or more displays.
- Do not put empty pans or frying pans on switched on cooking zones.
- Keep children under the age of 8 away from the appliance when it is in use.
- Activate the controls lock when you have children or pets which could reach the hob.
- After use the cooking zones remain hot for a certain period of time after they have been turned off. Do not touch the hob surfaces.



#### High temperature Danger of fire or explosion

- Do not use or leave flammable materials near the appliance or directly underneath the hob.
- Do not cook in closed tins or containers, plastic kitchenware or containers.
- Do not leave the appliance unattended during cooking operations where fats or oils could be released.
- In case you notice cracks or fissures or you cannot turn off the appliance, disconnect the power supply and contact the Assistance Centre.



#### Improper use Risk of damage to surfaces

- Do not use the hob if the pyrolytic cycle is taking place inside any oven installed below.
- Never place pans with bases which are not perfectly flat and smooth.
- Avoid hard, solid objects falling on the cooking surface.
- In case you notice cracks or fissures, turn off the appliance immediately, disconnect the power supply and contact Technical Support.
- Do not use the hob as a support surface.



## 3.1 Preliminary operations

In order to remove any moisture that could have accumulated during the manufacturing process and for the electronic circuits and control keypad to work properly:

1. Remove the protective films from the external surfaces of the appliance and accessories.
2. Remove any labels (apart from the technical data plate).



On first connection to the electrical mains, an automatic check will be carried out that will switch on all indicator lights for a few seconds. It might happen that on the displays the text **H** appears to indicate that during factory testing the hob was switched off with residual heat active. After 6 minutes this indications deactivates automatically.

## 3.2 Using the cooking hob

All the appliance's control and monitoring devices are located together on the front panel. The hob is controlled by means of the Touch Control sensor buttons.


The power in the cooking zones can be adjusted to various levels.

Lightly touch a symbol on the glass ceramic surface. A beep will sound to confirm every effective touch.



Saucepans and other pans must not cover the sensor buttons as otherwise they could accidentally deactivate the appliance.








### Switching on the cooking hob

To switch on the hob, hold down the **ON/OFF**  key for at least 3 seconds.





If no cooking zone is activated within 30 seconds of switching on, the hob switches off automatically.





### Switching on a single cooking zone

1. After switching on the hob, use the **Increase**  keys to activate the required cooking zone. The display shows the symbol .
2. Press the **Increase**  key again. The display shows the symbol  or  to indicate that the cooking zone is on at the maximum power.
3. Press the **Increase**  and **Decrease**  keys to increase or decrease the required power level.










If the **Increase**  key is pressed when the cooking zone is at the maximum power  or , the cooking zone deactivates ()







When the cooking zone is off () it cannot be activated by pressing the **Decrease**  key.

### Switching on the double cooking zone

1. After setting the maximum power  or , press the **Increase**  keys. On the display a lighted dot comes on beside the power setting to indicate that the double cooking zone  or  has switched on.
2. Press the **Increase**  and **Decrease**  keys to increase or decrease the required power level.



If the **Increase**  key is pressed when the cooking zone is at the maximum power  or , the cooking zone deactivates ()



## Use

### Switching on the triple cooking zone

1. After setting the maximum power **9** or **P**, press the **Increase** **+** keys. On the display a lighted dot comes on beside the power setting to indicate that the internal cooking zone **9** or **P** has switched on.
2. Press the **Increase** **+** key again to completely activate the cooking zone. On the display a lighted dot flashes beside the power setting to indicate that the entire cooking zone **9** or **P** has switched on.
3. Press the **Increase** **+** and **Decrease** **-** keys to increase or decrease the required power level.



If the **Increase** **+** key is pressed when the cooking zone is at the maximum power **9** or **P**, the cooking zone deactivates (**0**).

### Melting function



This function can be used to melt food such as butter, chocolate etc.

To activate the Melting function, first turn on the hob, then:

1. After having set the power to **P** (or **P** for multiple cooking zones), press the **Increase** **+** key. **0** appears on the display.
2. Press the **Increase** **+** key again. **U** appears on the display.

### Residual heat

After switching off the cooking zone, if it is still hot, **H** is displayed.



**High temperature  
Danger of burns**






- Children cannot readily see the residual heat indicator. The cooking zones remain hot for a certain period of time even after they have been turned off. Make sure that children never touch the hob.




## Accelerator

This function can be used to reach the selected heating level more quickly.





The cooking zones will start at maximum power. Once the selected power level is reached, power is reduced.

- Using the **Increase**  and **Decrease**  keys, select a power level between **1** and **9** (also in double or triple mode).
- Press the **Increase**  and **Decrease**  keys simultaneously for the cooking zone to be heated using the accelerator function. The display alternately shows  and the power level just selected.


Power level	Heating time with  function activated (minutes)
1	2
2	3
3	4
4	5
5	6
6	7
7	8
8	10
9	12

## Controls lock

The controls lock is a device that protects the appliance from accidental or inappropriate use. Useful for preventing accidental changes to set cooking values, the lock can be activated while the hob is on or off.

- After switching on the hob, press the **Controls lock**  key for at least 2 seconds. A lighted dot appears on the key to indicate that the controls are locked. Pressing any key,  or  is displayed (depending on the model).
- Press the **Controls lock**  key for at least 2 seconds. The lighted dot above the symbol switches off to indicate that the controls have been unlocked and any key can be pressed.



For safety reasons the **ON/OFF**  key stays active with at least one cooking zone switched on. The entire hob can be switched off at any time, even if the controls lock is active.



## Minute minder timer

This function allows you to set a minute minder timer, which will sound a buzzer at the end of the pre-set time (from 1 to 99 minutes).

1. Press the **Timer** **TIMER** key when the appliance is off. The display shows **00** to indicate that the timer can be modified.
2. Press the **Increase** **+** or **Decrease** **-** key to set the required timer time (hold the keys down to advance more quickly).
3. At the end of the set time, the hob will warn the user with a series of buzzers. To stop this indication, press the **Timer** **TIMER** key.
4. To deactivate the minute minder timer during the countdown, zero its value using the **Decrease** **-** key. When the display shows **00** the timer will be deactivated.

## Automatic shut-down timer

This function allows you to program the automatic shut-down of each cooking zone at the end of a set period of time (from 1 to 99 minutes).

1. Press the **Timer** **TIMER** key. The display shows **00** to indicate that the timer can be modified.
2. Press the **Timer** **TIMER** key again. If at least one cooking zone is active a lighted dot comes on under the controls of the first active zone (from left to right).
3. Press the **Increase** **+** or **Decrease** **-** key to set the required automatic shut-down time (hold the keys down to advance more quickly), or select a further cooking zone using the **Timer** **TIMER** key.
4. To modify the set time, press the **Timer** **TIMER** key until a lighted dot appears under the controls of the cooking zone for which you wish to carry out the change.
5. At the end of the previously set time, the hob deactivates the cooking zone and warns the user with a series of buzzes. Press any key to stop the indication.

**i** If the automatic shut-down timer is activated and no cooking zone is active it functions like a minute minder timer.



## Secondary menu


The hob has a secondary menu for activating or deactivating some parameters:

**1 = Automatic controls lock:** activating this mode, one minute after the last operation by the user, the controls lock will automatically activate.

**2 = Showroom:** activating this mode, the appliance deactivates all heating elements, while keeping the control panel active (useful for demonstration purposes in store).

Every minute, **5 H 0** appears for one second on the display. To use the hob normally, set this mode to **n**.


**3 = ECO-logic (on some models only):** activating this mode, the hob electronics automatically adjust the power levels to stay within the set maximum power absorbed: 3 or 4 kW. To use the hob at maximum power, set this mode to **n**.

On first installing, within two minutes of powering on the hob, hold down the **Increase** **+** and **Decrease** **-** keys for the first cooking zone (the one near the  symbol).

The cooking zone display shows the number of the setting currently being modified (**1 = Automatic controls lock**, **2 = Showroom**, **3 = ECO-logic**) with its setting at the side (**5**: activated, **n**: deactivated).

For example, **1 n** indicates that the **Automatic controls lock** is deactivated.

Press the **Increase** **+** or **Decrease** **-** key to change the settings for value **5** or **n**.

If the **ECO-logic** parameter is modified you can select the following values: **3** (3 kW), **4** (4 kW), **n** (maximum power draw). To advance and change the subsequent settings, press the **Controls lock** key .



If the hob is already installed and in use, cut the power supply to the hob. Switch the power back on and proceed as indicated above within two minutes.



## Advice on energy-saving

- The diameter of the base of the pan must correspond to the diameter of the cooking zone.



- When buying a saucepan, check whether the diameter indicated is that of the base or the top of the container, as the top is almost always larger than the base.
- The base of the cookware must be thick and completely flat. It should also be clean and dry. The hob should be clean and dry as well.
- When preparing dishes with long cooking times, you can save time and energy by using a pressure cooker, which also makes it possible to preserve the vitamins in the food.
- Make sure that the pressure cooker contains enough liquid as, if there is not enough and it overheats, this may cause damage to both the pressure cooker and the cooking zone.

- If possible, always cover saucepans with a suitable lid.
- Choose a pan suitable for the quantity of food to be cooked. A large, half-empty saucepan leads to a waste of energy.
- Do not use cast-iron cookware or cookware with a rough base.



Under certain circumstances, if the hob and the oven are being used at the same time, the maximum power limit that can be used by the electrical system might be exceeded.





## Cooking information table

Power level	Cooking mode	Suitable for...
0	OFF setting	Off
U	Dishwarming	Warming up dishes
1	Cooking small amounts of food (minimum power)	Melting butter, chocolate or similar products.
2	Cooking small amounts of food	Keeping small amounts of water on the boil, whipping up sauces with egg yolk or butter.
3 - 4	Normal cooking	Heating solid or liquid food, keeping water on the boil, defrosting deep-frozen food, cooking 2 or 3 egg omelettes, fruit and vegetables, various cooking processes.
5	Cooking large amounts of food	Keeping water on the boil, cooking 4 or 6 egg omelettes, fruit and vegetables, various cooking processes.
6	Cooking large amounts of food, roast	Stewing meat, fish and vegetables, simmering food, making jams, etc.
7 - 8	Roasting larger pieces, frying with flour	Roasting meat, fish, steaks and liver; sautéing meat, fish, eggs, etc.
9 - P *	Roasting, browning, cooking (maximum power)	Deep-frying potatoes, etc., or bringing water to the boil rapidly.

\* on some models only



## Limiting the cooking time

The hob has an automatic device which limits the duration of use.

If the cooking zone settings are not changed, the maximum duration of operation for each zone depends on the power level selected.

When the device for limiting the duration of use is activated, the cooking zone turns off, a short alert sounds and, if the zone is hot, the symbol **H** appears on the display.

Power level	Maximum cooking time (min.)
U	600
1	600
2	360
3	300
4	240
5	180
6	120
7	120
8	120
9	70
P	70

## Protection from overheating

If you are using the hob at full power for a long time, for the electronics it could be difficult to cool down, especially if the room temperature is high.

In this case a device intervenes to cut off the power supply to the front cooking zones and the display shows **H** and **E** flashing.

If the temperature of the electronic circuit board does not decrease, the device will disconnect power to all the cooking zones and **H 1 E E** will appear on the display (on some models only).

Cooking can be resumed once the temperature returns below alarm levels.

## Other functions

If you press three or more controls at the same time or for a long period, (e.g. due to accidentally placing a saucepan on them or due to an overflow of liquid), an automatic device deactivates all the cooking zones if they are on and the display will show error **E 2**.

Remove the cause of the error from the keys.



## 4 Cleaning and maintenance



**Improper use**

**Risk of damage to surfaces**

- Do not use steam jets to clean the appliance.
- Do not spill sugar or sweet mixtures on the hob during cooking.
- Do not place materials or substances that could melt (plastic or aluminium foil).
- Keep sensor keys clean at all times and do not rest any object on them.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel- or chromium-plating).
- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges) on glass parts. Use wooden or plastic utensils.

### 4.1 Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

### 4.2 Ordinary weekly cleaning

Clean and maintain the hob once a week using an ordinary glass cleaning product. Always follow the manufacturer's instructions. The silicon in these products creates a protective, water-repellent membrane which also resists dirt. All marks stay on the membrane and can therefore be removed easily. After cleaning, dry the surface with a clean cloth. Make sure that there is no detergent left on the cooking surface as it will undergo a corrosive reaction when heated up and could modify the structure of the cooking surface.

### 4.3 Food stains or residues

Light coloured marks from pans with aluminium bases can be easily cleaned off with a cloth moistened in vinegar.

Remove any burnt-on residue after cooking; rinse with water and dry thoroughly with a clean cloth.

**Dirt** which may have fallen on the hob while cleaning lettuce or potatoes can scratch the hob when moving pans.

Consequently, remove any dirt from the cooking surface immediately.

**Changes in colour** do not affect the operation and stability of the glass. These are not alterations to the material of the hob but just residues which have not been removed and have then carbonised.



## Cleaning and maintenance

**Shiny surfaces** can form due to the bases of pans, especially aluminium ones, rubbing on the surface, and due to the use of unsuitable detergents. They are difficult to remove using conventional cleaning products. It may be necessary to repeat the cleaning process several times. Use of corrosive detergents or rubbing of pan bases can wear away the decoration on the hob over time and contribute to the formation of stains.

### 4.4 What to do if...

The hob does not work:

- Make sure that the hob is connected and that the main switch is turned on.
- Make sure that there is no power failure.
- Make sure that the fuse has not blown. In this case replace the fuse.
- Make sure that the circuit breaker of the residential electrical system has not tripped. In this case, reset the circuit breaker.
- Make sure that the sensor key are not locked by the Controls lock.
- Make sure that the keys are not partially covered by a damp cloth, a liquid or a metal object.

The cooking results are unsatisfactory:

- Make sure that the cooking temperature is not too high or too low.

The hob smokes:

- Let the hob cool down and clean it once cooking is complete.
- Make sure that the food has not spilled out of the pan and use a larger cooking vessel, if needed.

The display shows "E2":

- Make sure that there is no spilled food on the sensor keys.
- Remove any pan or object that are partially resting on the sensor keys.

"E" appears on the display:

- One of the keys has been kept pressed for a long time or a technical fault has occurred. In the latter case, contact Technical Support.

The fuses blow or the circuit breaker of the residential electrical system trips repeatedly.

- Call Technical Support or an electrician.

There are cracks or fissures in the hob:

- Turn off the appliance immediately, disconnect the power supply and contact Technical Support.



## 5 Installation

### 5.1 Safety instructions



**Heat production during appliance operation**  
**Risk of fire**

- Check that the carcass material is heat resistant.
- Check that the carcass has the required openings.
- **CAUTION:** The surface temperature exceeds  $95^{\circ}\text{C}$ . To avoid a hazard, under bench access must be restricted.

Veneers, adhesives or plastic coatings on adjacent furniture should be temperature-resistant ( $>90^{\circ}\text{C}$ ), otherwise they might warp over time.

The minimum clearance between a ventilation hood and the cooking surface must be at least the distance indicated in the ventilation hood installation instructions.

The minimum clearances must also be respected for the edges of the hob on the back as indicated in the mounting illustrations.

### 5.2 Section cut from the countertop




The following operation requires building and/or carpentry work and must therefore be carried out by a competent tradesman.


Installation can be carried out on various materials such as masonry, metal, solid wood or plastic laminated wood as long as they are heat resistant ( $>90^{\circ}\text{C}$ ).

Make a hole in the countertop of the unit according to the dimensions shown in the figure (mm).

#### Hobs with bevelled edge

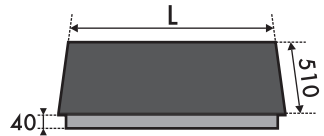

L	X	Y
600	565	490
900	850	490

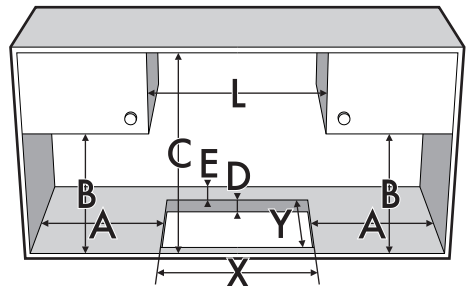


A	B	C	D	E
min. 50	min. 460	min. 750	20-60	min. 50



# Installation

## Hob seal



To prevent leakage of liquid between the frame of the hob and the countertop, place the adhesive seal provided along the entire outer edge of the hob before assembly.

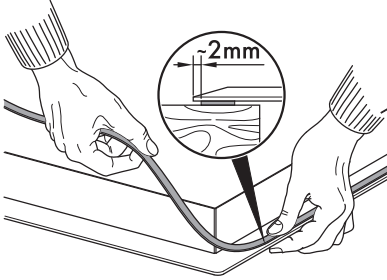


Do not use silicone to secure the hob. This would make it impossible to remove the hob, if necessary, without damaging it.

## Hobs with a straight edge

For this kind of hobs additional milling is needed in the recessed hole if you wish to install the hob flush with the work surface.

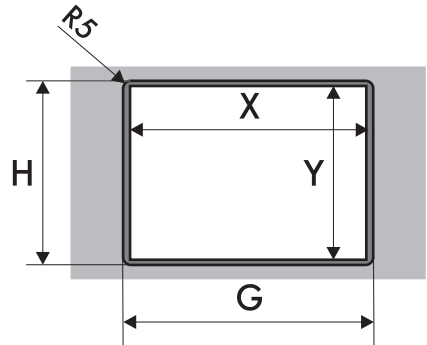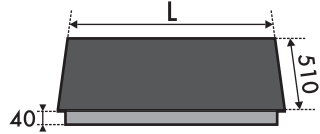

L	X	Y	G	H
600	565	490	604	514

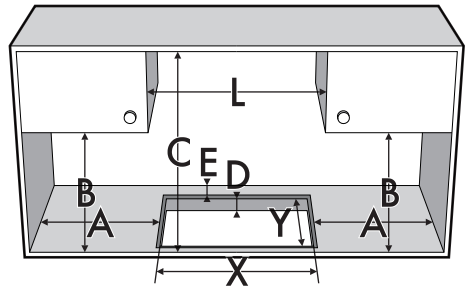


A	B	C	D	E
min. 50	min. 460	min. 750	20-60	min. 50



After laying the adhesive seal (A) on the glass surface and after positioning and securing the hob, fill the edges with insulating silicone (B) and wipe away any excess.


In the event the hob needs to be removed, cut the silicone using a cutter before attempting to remove it (C).

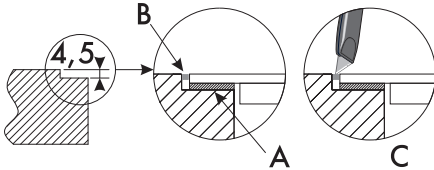


## Spring clips

To ensure the hob is fixed and centred as accurately as possible, the clips provided must be positioned as described below:

1. Fit the clips by gently pressing them horizontally into the appropriate space.

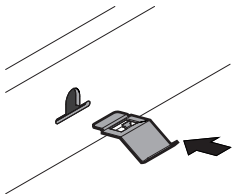


2. Then turn them upwards to fix them in place.

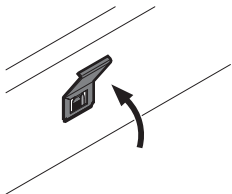

## Fixing brackets

- Screw the fixing brackets into the holes on the sides of the bottom casing to properly fasten the hob to the structure.

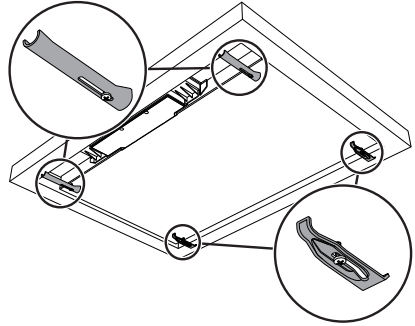

If tightened too much the glass may be strained and crack.




# Installation

## 5.3 Mounting

### Over built-in oven unit

The clearance between the hob and the kitchen furniture or other installed appliances must be enough to ensure sufficient ventilation and air discharge.




If installed above an oven, a space must be left between the bottom of the hob and the top of the appliance installed below.

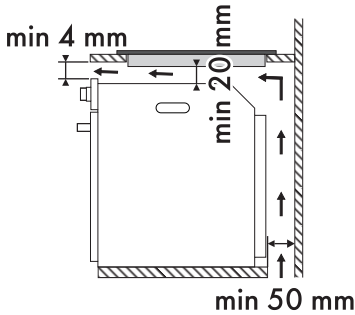

If installed on top of an oven, the latter must be equipped with a cooling fan.

### On top of an empty kitchen unit or drawers

If there are other pieces of furniture (lateral walls, drawers, etc.), dishwashers or fridges under the hob, a double-layer wooden base must be installed at least **20 mm** from the bottom of the hob to avoid any accidental contact. It must only be possible to remove the double-layer base by using suitable tools.

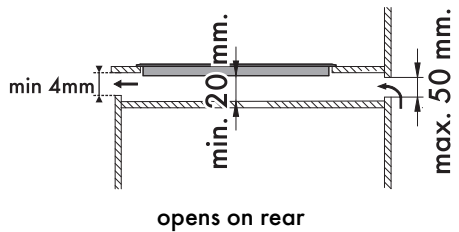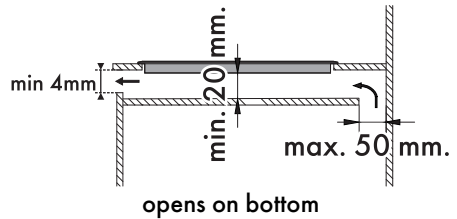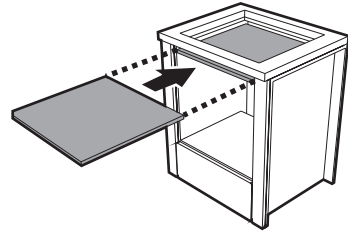

Failure to install the double-layer wooden base exposes the user to possible accidental contact with sharp or hot parts.





## 5.4 Electrical connection



### Power voltage Danger of electrocution

- Have the electrical connection performed by authorised technical personnel.
- Use personal protective equipment.
- The appliance must be connected to earth in compliance with electrical system safety standards.
- Disconnect the mains supply.
- Use cables withstanding a temperature of at least 90°C.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.
- **The power cable must only be installed or replaced by a qualified technician.**
- Use the cable provided (depending on the model) following the instructions below.

## General information

Check the grid characteristics against the data indicated on the plate.

The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance.

Do not remove this plate for any reason.

Perform the ground connection using a wire that is 20 mm longer than the other wires.


The appliance can work in the following modes:



# Installation


## 60 cm models:

The diagram below illustrates the power supply terminal from below, with no cables connected. Terminals **2** and **3** and terminals **4** and **5** must be connected at all times.

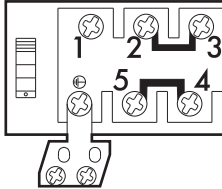


## 90 cm models:


The diagram below illustrates the power supply terminal from below, with no cables connected. Terminals **4** and **5** must be connected at all times.

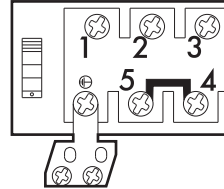


- 220-240 V 1N~

 

- 220-240 V 1N~

 


- 380-415 V 2N~

 


Use the **3 x 6 mm<sup>2</sup> three-core** cable provided.

 - 220-240 V 2~




- 220-240 V 2~

 

Use the **3 x 6 mm<sup>2</sup> three-core** cable provided.

 - 220-240 V 3~




Use the **5 x 2.5 mm<sup>2</sup> five-core** cable provided.




If the cable is replaced, the appliance can also function in the following modes:

 - **380-415 V 2N $\sim$**




**4 x 4 mm<sup>2</sup> four-core** cable.

 - **220-240 V 3 $\sim$**



**4 x 4 mm<sup>2</sup> four-core** cable.

 - **380-415 V 3N $\sim$**



**5 x 2.5 mm<sup>2</sup> five-core** cable.

## Fixed connection

Fit the power line with an omnipolar circuit breaker in compliance with installation regulations.

The circuit breaker should be located near the appliance and in an easily reachable position.

For stationary appliances permanently connected to the fixed wiring, compliance with this requirement is considered to be met if the instruction concerning disconnection incorporated in the fixed wiring is in accordance with AS/NZS3000.



Run the power cable in the rear part of the unit. Make sure that it does not come into contact with the lower part of the hob or a built-in oven below it.



Be careful when connecting additional electrical appliances. Connection cables must not come into contact with hot cooking zones.

## Testing

At the end of installation, carry out a brief inspection test. If it fails to work, after making sure that you have carried out the instructions correctly, contact Technical Support.



## 5.5 Instructions for the installer

- Do not bend or trap the power cable.
- The appliance must be installed according to the installation diagrams.
- If the appliance does not work correctly after having carried out all the checks, contact your local Authorised Service Centre.
- Once the appliance has been installed, please explain to the user how to use it correctly.



914778304/B